
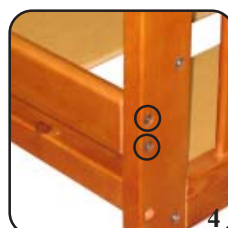


Cot Bed Rail

For your safety we highly recommend that you follow the instruction steps in the sequence specified.

1. Remove the preassembled filling screw which are located nearest to the outer edge of the end panel on both ends of the cot. See image 1
2. Loosen (but do not remove) all 4 bolts for the mattress base. See image 2
3. Start with the fixed side of the cot using the following steps:
 - a. Remove 4 bolts holding the side in place and carefully lower the side to the ground. See image 3
 - b. Place barrel nuts into the bed rail holes, making sure the slot is positioned horizontally. See image 2
 - c. Line up the bedrail with the holes located on the inside of each end panel. See image 3
 - d. Place the screws into the bed rail as shown and gently tighten but not fully. See image 4
3. Remove the drop side panel. Repeat step 3b.
4. Place the filling screws removed earlier in the vacant holes located on the end panels of the fixed side panel. See image 5
5. Tighten all bolts. Do not over tighten.

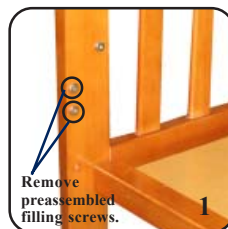

WARNING

- This bed rail is only designed for use when the child can get on and off the bed unaided, at approximately 3-5 years of age.
- This bed rail is only designed for use with the 'Childcare' Chelsea Cot, Coventry Cot and Hampton Cot and with a 'Childcare' mattress which has the following dimensions:
(1300 mm long x 690 mm wide x 125-135 mm thick)
- This bed rail does not provide protection against falls, a separate 'Childcare' bed guard is recommended should this be required.
- Castors should be removed from the cot when bedrail is used.

Due to our continuing programme of development, Childcare reserves the right to alter the specifications, colour or design without further notice.

Due to variations in the style and design of our products the illustrations used in this instruction manual are generic.